

Instruction Sheet For Grease Gutter SideKick

Grease Gutter SideKick Kit Includes;

6 1 1/4" Phillips hex head self tapping screws, 1-Fillmore SideKick filter, 1- tube of caulk

Pre-Installation

Make sure there are no obstructions that will be in the way of the mounting area on the duct such as electric boxes, conduits, brackets, etc. Check to be sure that the power supply conduit is in good condition and has adequate length for the fan to be tilted.

1) Turn off power to fan (if needed). Degrease perimeter of duct where unit will be mounted.

Note: In some low setting ventilator applications it may be necessary to trim the rear flashing of the trough using the provided casting marks as guides, to reduce the overall profile.

2) Apply a good coating of provided sealer on the back side of the Gutter where unit will make contact.

Note: This seal between the system's flashing and the duct is VERY important for the purpose of preventing grease from seeping behind the system.

3) Level the Sidekick and fasten to the mounting surface with **ALL provided screws.**


4) Once the installation has been completed, run a bead of Caulk along the seam between the Sidekick and the fan Curb.

Note: Again, this is VERY important for the purpose of preventing grease from seeping behind the system and ending up on the roof.

(1)



(2)

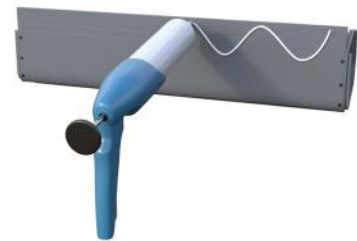

(3)



Use ALL provided Screws

(4)



FOR TECHNICAL ASSISTANCE, CONTACT US AT:

866.704.OMNI • SALES@OMNI-SUPPLY.COM • WWW.OMNI-SUPPLY.COM
1501 COMMERCE DRIVE ELGIN, IL 60123